


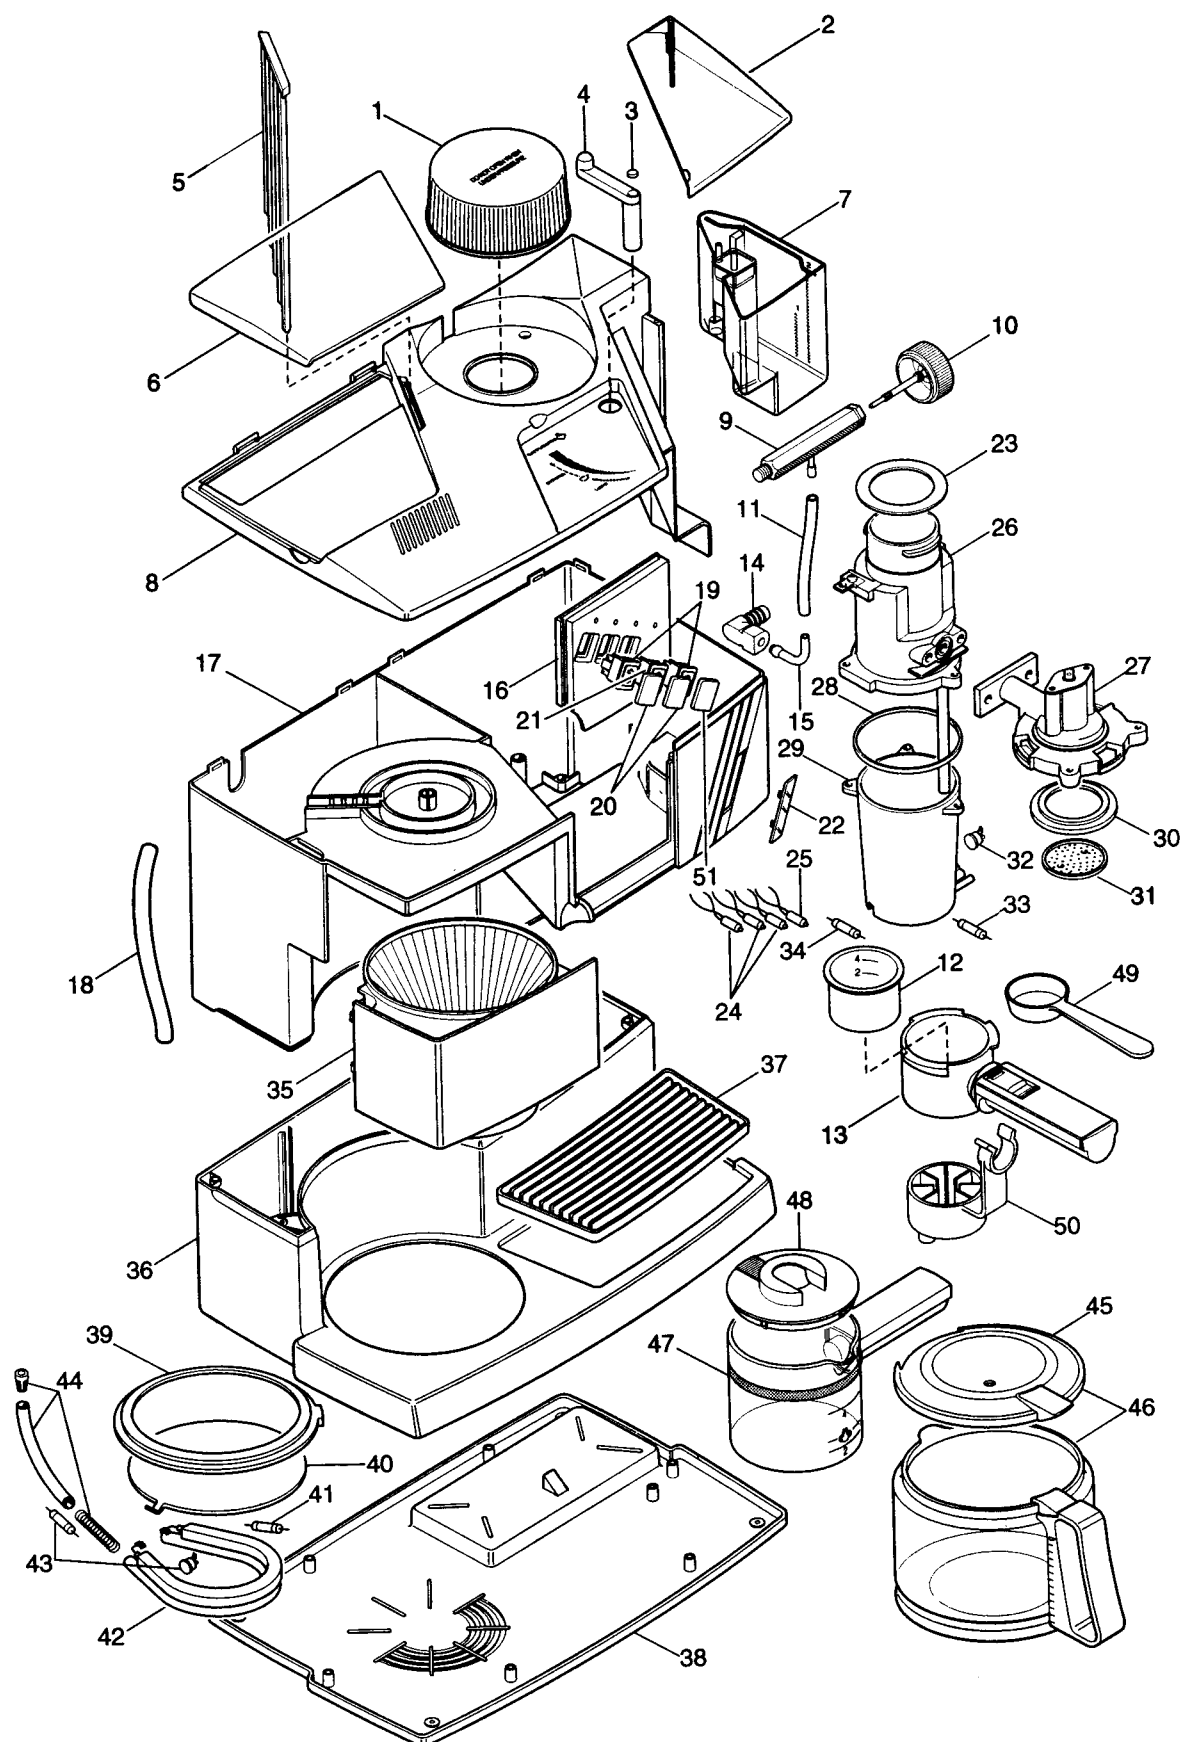

Pos	Codice	Italiano	English	Francais	Deutsch	Espanol
	EE1094	ISTRUZIONI	INSTRUCTION BOOK	MODE D'EMPLOI	BEDIENUNGSANLEITUNG	ISTRUCCION
001	EE1000	TAPPO	STOPPER	BOUCHON	STOEPESEL	TAPON
002	EE1080	COPERCHIO	COVER	COUVERCLE	DECKEL	TAPA
003	EE1082	TAPPO	STOPPER	BOUCHON	STOEPESEL	TAPON
004	EE1081	LEVA	LEVER	LEVIER	HEBEL	PALANCA
005	EE1079	INDICE	INDICATOR	INDICATEUR	ZEIGER	INDICE
006	EE1078	COPERCHIO	COVER	COUVERCLE	DECKEL	TAPA
007	EE1084	CONTENITORE	CONTAINER	RESERVOIR	BEHAELTER	CONTENEDOR
008	EE1077	COPERCHIO	COVER	COUVERCLE	DECKEL	TAPA
009	EE1056	RUBINETTO	TAP	ROBINET	HAHN	GRIFO
010	EE1057	MANOPOLA	KNOB	BOUTON	KNOFF	MANDO
011	EE1054	TUBO	TUBE	TUBE	ROHR	TUBO
012	EE1086	FILTRO	FILTER	FILTRE	FILTER	FILTRO
013	EE1085	COPPETTA	SUMP	COUELLE	SCHALE	COPITA
014	EE1062	CONNETTORE	CONNECTOR	CONNECTEUR	STECKER	CONECTADOR
015	EE1061	RACCORDO	CONNECTION	RACCORD	ANSCHLUSS	JUNTURA
016	EE1072	CRUSCOTTO	CONTROL PANEL	Tableau de Commande	BEDIENUNGSBLENDE	Marco Panel Mandos
017	EE1060	INVOLUCRO	CASING	ENVELOPPE	GEHAEUSE	ENVOLTURA
018	EE1064	TUBO	TUBE	TUBE	ROHR	TUBO
019	512309	INTERRUTTORE	SWITCH	INTERRUPTEUR	SCHALTER	INTERRUPTOR
020	EE1073	TASTO	PUSH BUTTON	POUSOIR	TASTE	TECLA
021	512308	INTERRUTTORE	SWITCH	INTERRUPTEUR	SCHALTER	INTERRUPTOR
022	EE1063	MOSTRINA	PLATE	PLAQUE	PLATTE	PLACA
023	EE1015	GUARNIZIONE	GASKET	JOINT	DICHTUNG	GUARNICION
024	EE1058	SPIA	WARNING LIGHT	TEMOIN LUMINEUX	KONTROLLEUCHTE	PILOTO
025	EE1075	SPIA	WARNING LIGHT	TEMOIN LUMINEUX	KONTROLLEUCHTE	PILOTO
026	EE1053	CALDAIA	BOILER	CHAUDIERE	HEIZKESSEL	CALDERA
027	EE1051	DISTRIBUTORE	DISTRIBUTOR	DISTRIBUTEUR	VERTEILER	DISTRIBUIDOR
028	EE1022	GUARNIZIONE	GASKET	JOINT	DICHTUNG	GUARNICION
029	EE1055	CALDAIA	BOILER	CHAUDIERE	HEIZKESSEL	CALDERA
030	EE1023	GUARNIZIONE	GASKET	JOINT	DICHTUNG	GUARNICION
031	EE1052	DIFFUSORE	DIFFUSER	DIFFUSEUR	DIFFUSOR	DIFUSOR
032	EE1026	TERMOSTATO	THERMOSTAT	THERMOSTAT	THERMOSTAT	TERMOSTATO
033	EE1006	TERMOFUSIBILE	FUSE	FUSIBLE	SCHMELZSICHERUNG	FUSIBLE
034	EE1059	TERMOFUSIBILE	FUSE	FUSIBLE	SCHMELZSICHERUNG	FUSIBLE
035	EE1089	IMBUTO	FUNNEL	ENTONNOIR	TRICHTER	EMBUDO
036	EE1065	BASAMENTO	BASE	SOCLE	UNTERGESTELL	BASE
037	EE1083	POGGIATAZZE	DRIP TRAY	APPUIE TASSES	TASSENAUFLAGE	APOYA TAZAS
038	EE1076	FONDO	BOTTOM	FOND	BODEN	FONDO
039	EE1066	ANELLO	RING	ANNEAU	RING	ANILLO
040	EE1067	PIASTRA	PLATE	PLAQUE	PLATTE	PLACA
041	EE1070	TERMOFUSIBILE	FUSE	FUSIBLE	SCHMELZSICHERUNG	FUSIBLE
042	EE1068	RESISTENZA	HEATING Element	ELEMENT Chauffant	HEIZELEMENT	RESISTENCIA
043	EE1069	TERMOSTATO	THERMOSTAT	THERMOSTAT	THERMOSTAT	TERMOSTATO
044	EE1071	VALVOLA	VALVE	SOUPAPE	VENTIL	VALVULA
045	EE1091	COPERCHIO	COVER	COUVERCLE	DECKEL	TAPA
046	EE1090	CONTENITORE	CONTAINER	RESERVOIR	BEHAELTER	CONTENEDOR
047	EE1087	CONTENITORE	CONTAINER	RESERVOIR	BEHAELTER	CONTENEDOR
048	EE1088	COPERCHIO	COVER	COUVERCLE	DECKEL	TAPA
049	EE1009	MISURINO	MEASURING SPOON	CUILLIERE	MESSBECHER	DE DOSAGE MEDIDOR
050	EE1092	ADATTATORE	ADAPTER	ADAPTATEUR	PASSTUECK	ADAPTADOR
051	EE1074	TASTO	PUSH BUTTON	POUSOIR	TASTE	TECLA

DE'LONGHI "D" BCO80 Cod.0132407009